



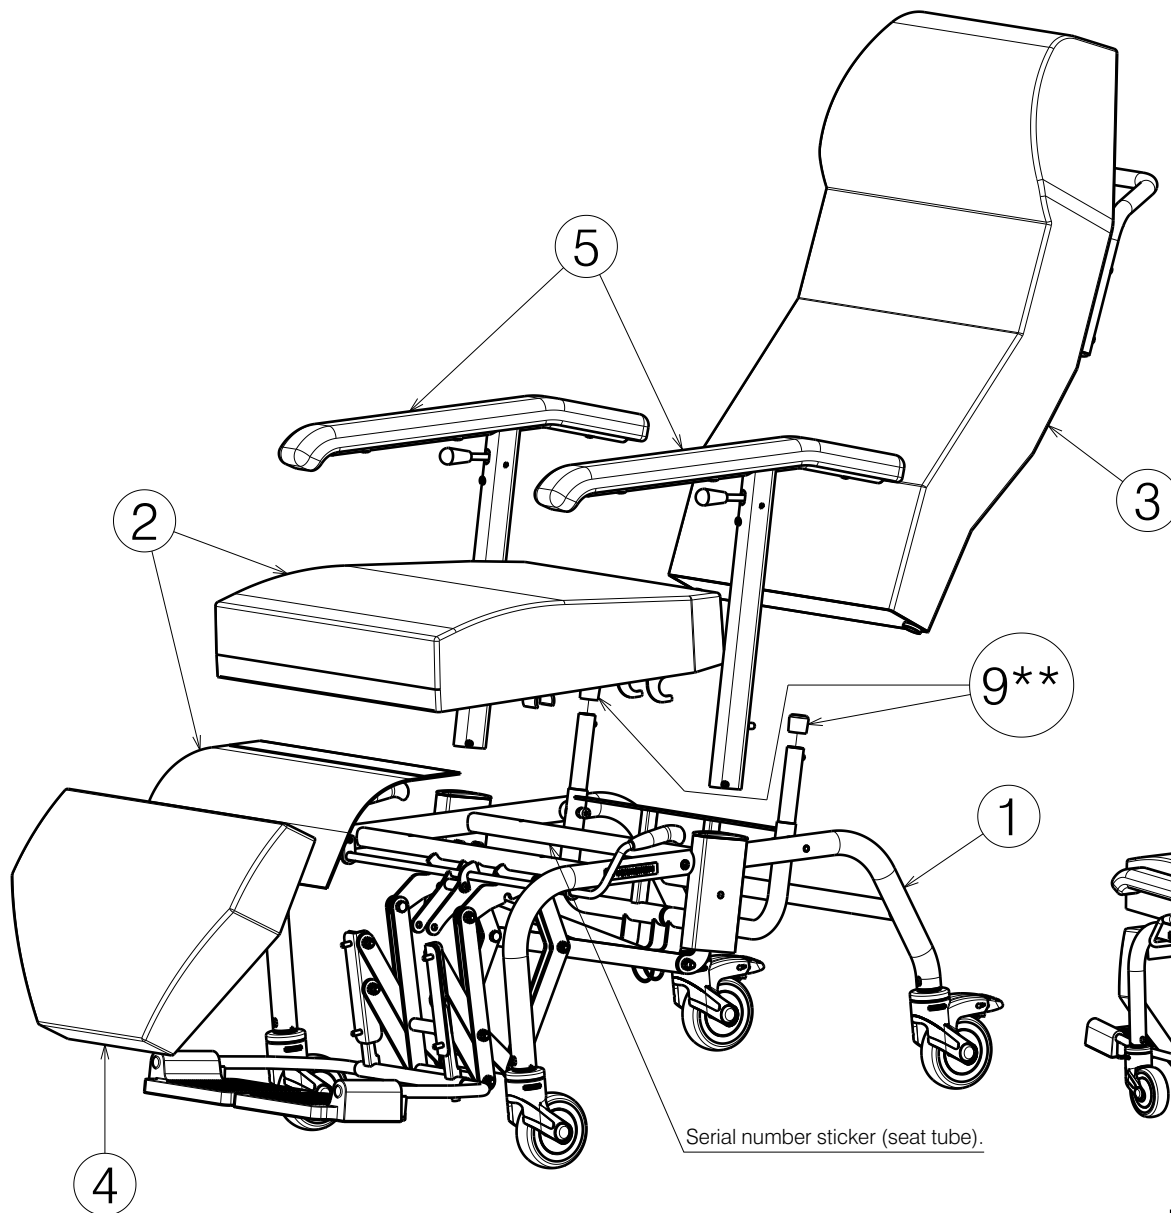

Material			
No.	Plan	Article	Quantity
1	E00080777	2998455	1
2	EP00531	2994887	1
3	EP00532	2994888	1
4	EP00533	2994889	1
5	EP00534	2994890	1
6*	XP03295	U000434	1
7*	5mm DIN911	W620228	1
8*	Bag	U000123	1
9**	Cap D22	1001625	2

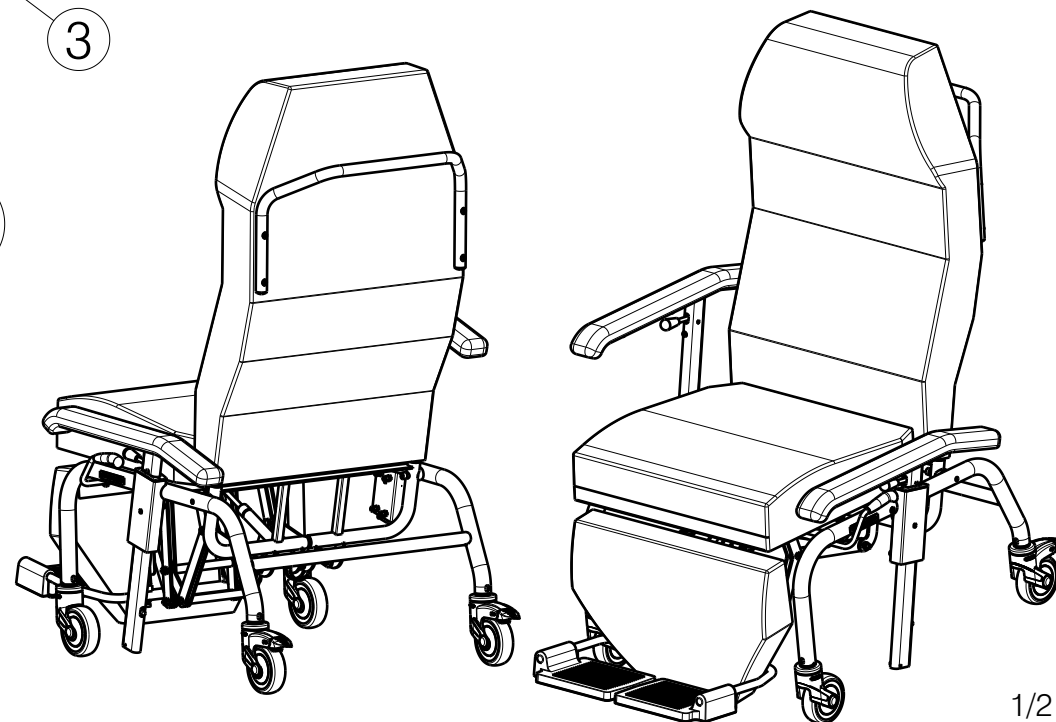

1/2

NOTICE: THE INFORMATION CONTAINED ON THIS DRAWING IS PROPRIETARY TO VERMEIREN GROUP AND SHALL NOT BE DISCLOSED IN WHOLE OR IN PART, OR USED FOR ANY DESIGN OR MANUFACTURE, EXCEPT WHEN SUCH USER POSSESSES DIRECT WRITTEN AUTHORISATION FROM VERMEIREN GROUP.

SPECIFICATION / NORMANDIE PLUS

Scale:	1:10	Drafted	Verified	Confirmed
Date	08.05.2024	10/06/2024	10/06/2024	
Initials	AZ	PM	AZ	

Plan No.




E00080781/A1.1



* - not depicted;


** - use only in transport to protect upholstery - see packing instruction;

*** - SOP: S-BE.90.03 - packing instruction.

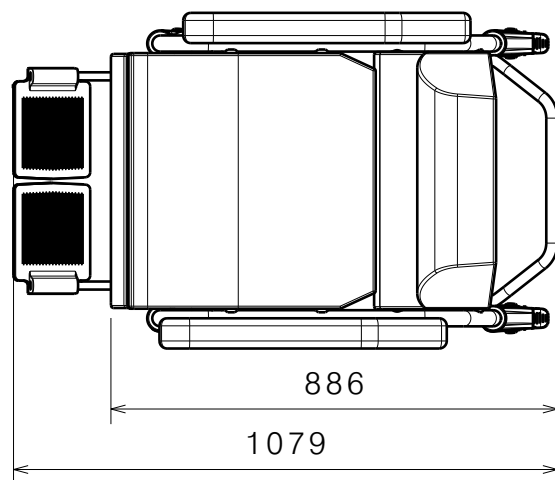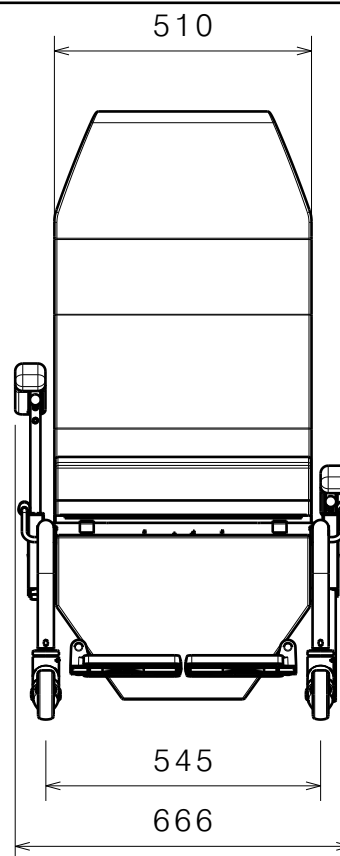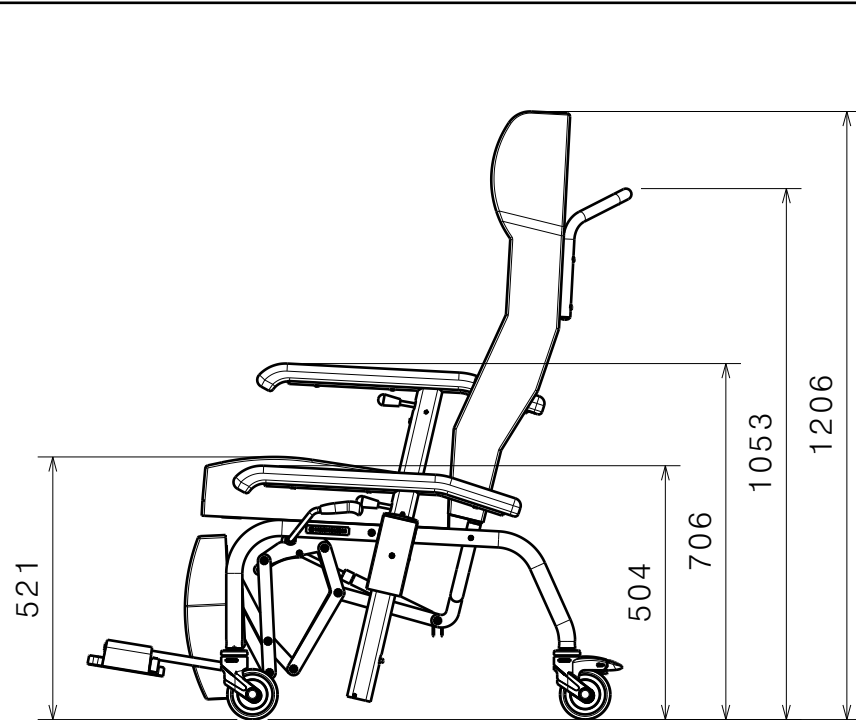


Additional information about assembly and packing:

- 1) Assembled B06 (left and right) packed separately in box no.6* (U000434). (no instal to frame before packing - for customer assembly). To pack use foam(1009993*) and vacuum sealing foil (T001005*). Additional use bag no.8* (U000123) to pack:
a) 2x 1001494* (see:E00080777/no.51`)
b) 1x no.7* (W620228).
Place the packed bag no.8* in box no.6* (U000434).

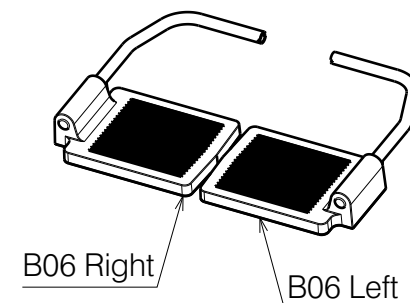

- 2) Attachment for B06 - 2689565 assembled together with frame before packing.

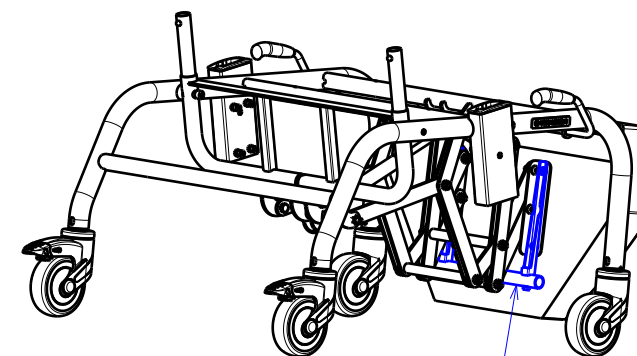

[see:E00080777/no.43 \(2689565\)](#)

2/2

* - not depicted;
** - use only in transport to protect upholstery - see packing instruction;
*** - SOP: S-BE.90.03 - packing instruction.

NOTICE: THE INFORMATION CONTAINED ON THIS DRAWING IS PROPRIETARY TO VERMEIREN GROUP AND SHALL NOT BE DISCLOSED IN WHOLE OR IN PART, OR USED FOR ANY DESIGN OR MANUFACTURE, EXCEPT WHEN SUCH USER POSSESSES DIRECT WRITTEN AUTHORISATION FROM VERMEIREN GROUP.

SPECIFICATION / NORMANDIE PLUS

Scale:	1:15	Drafted	Verified	Confirmed
Date	08.05.2024	10/06/2024	10/06/2024	
Initials	AZ	PM	AZ	

Plan No.
E00080781/A1.1

